


Vulcano – Quick Reference Guide




Before you put the device into service for the first time, read through carefully the "Instructions for setting-up, commissioning, cleaning and maintenance"!

Operating panel overview

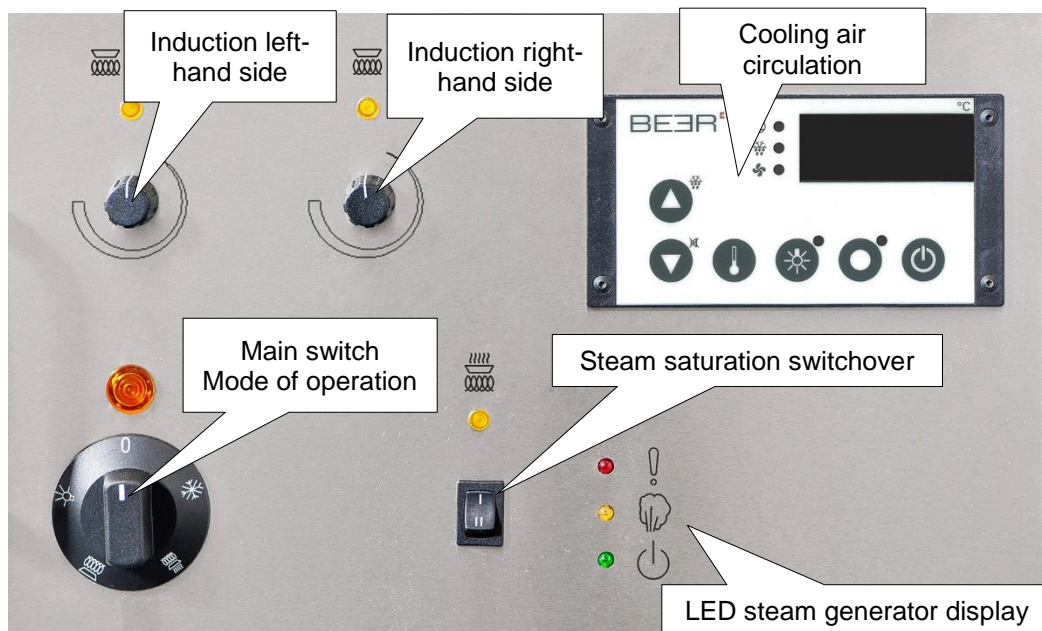

Light/heating channel overview

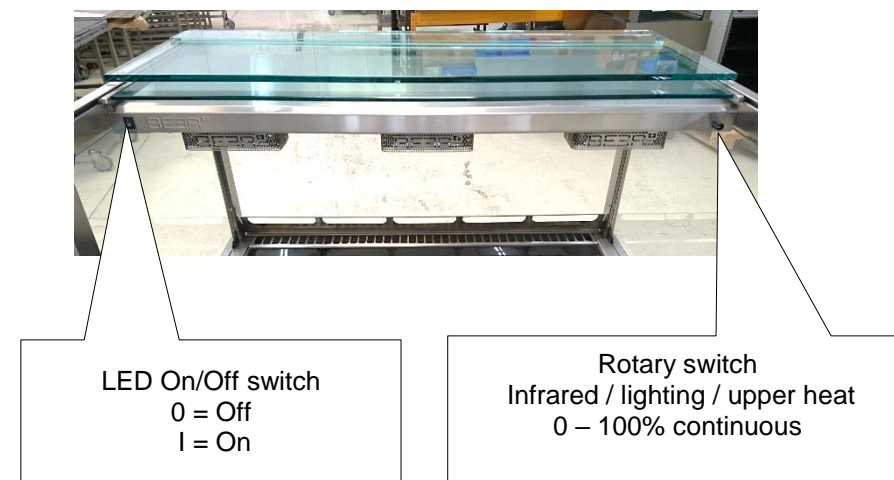

Select the desired mode of operation: For commissioning, follow the detailed steps on the back.



Instructions for hot operation

Step 1 Select mode of operation

A = hot dry



B = Hot steamed (optional)
→ Check water supply (tank or central water)



Then with flip switch
select steam saturation


I = 66 %
II = 100 %



Step 2 Regulate induction

A = Induction left

B = Induction right

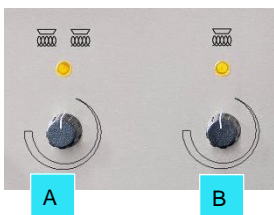

Step 3 Switch on light/heat top

B = LED On/Off switch
I = On
0 = Off



Instructions for cold operation


Step 1 Select mode of operation


A = cold operation



Step 2 Set desired temperature

A = Button 
press and hold
adjust by
pressing

B =  or 

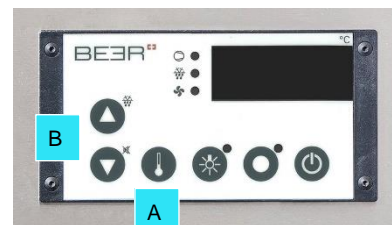

Step 3 Switch on light top


A = Rotary switch 0 – 100 %
adjust
B = LED Switch On/Off
I = On
0 = Off



Instructions for neutral operation

Step 1 Select mode of operation

A = neutral operation

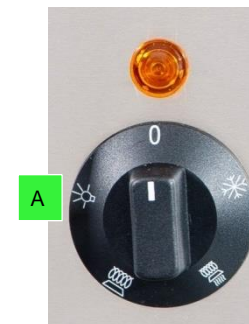

Step 2 Set light top

A = Rotary switch 0 – 100 %
continuous



For more detailed information, please see the complete operation and installation manual!